




Controller Model: **GE Fanuc VersaMax Micro and Nano**
 Maple OIT Model: **OIT3100 and OIT4100 Series**
 Communication Type: **RS-232 with RJ-45 at PLC**

Use the wiring diagram and illustration to assemble a communication cable for use with a GE Fanuc VersaMax Micro or Nano controller.

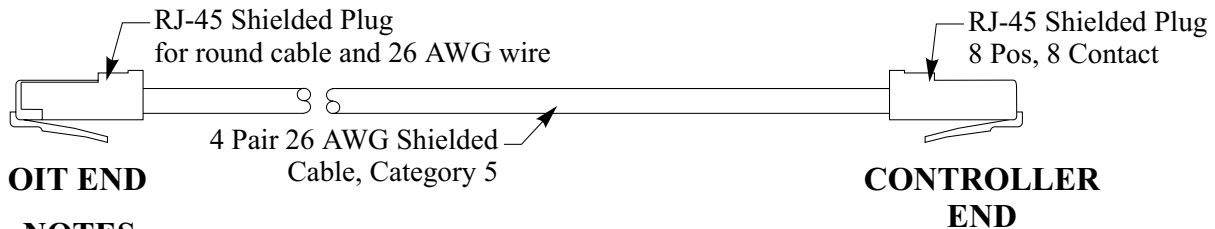

NOTES:

- 1 Connect shield wire to the metal housing of the RJ-45 connectors.
- 2 Numbering for the controller end is shown with both conventional RJ-45 numbering and with GE Fanuc numbering. GE Fanuc numbering is reversed from conventional.

