



Price List
Alphanumeric OITs
MicroOIT Series
MacroOIT Series

Effective October 15, 2010

STEP 1: Select Your Alphanumeric OIT Model

Product Family	Model Number	Display		Keypad			Function Keys		Protocols		Class1 Div 2	List Price
		Type	Line x Char.	Numeric Keypad	Alpha Keypad	Slide-in Legend	Global	Screen-Dependent	PLC	ASCII		
MicroOIT Series	OIT3160-B00	LCD	2x20	Yes	No	None	0	6	Yes	Yes	Yes	\$295
	OIT3165-A00	LCD	2x20	24 User Defined		All	0 to 16	0 to 8	Yes	Yes	Yes	\$295
	OIT3175-A00	LCD	4x20	16 User Defined		All	0 to 16	0 to 8	Yes	Yes	Yes	\$345
	OIT3185-A00	LCD	4x20	24 User Defined		All	0 to 16	0 to 8	Yes	Yes	Yes	\$345
	OIT4160-B00	VFD	2x20	Yes	No	None	0	6	Yes	Yes	Yes	\$395
	OIT4165-A00	VFD	2x20	24 User Defined		All	0 to 16	0 to 8	Yes	Yes	Yes	\$395
	OIT4175-A00	VFD	4x20	16 User Defined		All	0 to 16	0 to 8	Yes	Yes	Yes	\$495
	OIT4185-A00	VFD	4x20	24 User Defined		All	0 to 16	0 to 8	Yes	Yes	Yes	\$495
MacroOIT Series	MAP450D	LCD	2x40	Yes	Yes	None	0	0	No	Yes	No	\$650
	MAP460D-240B	LCD	2x40	Yes	No	None	12	0	Yes	Yes	No	\$650
	OIT3600-B00	LCD	2x40	Yes	No	None	12	0	Yes	Yes	No	\$650

Step 2: Select Your Accessories

Please refer to the Maple Systems Product Accessories Price List for current pricing of all accessories.

Model Number	Configuration Software (See Note 1)	Configuration Cable (See Note 2)	Communication Cable (See Note 3)	Power Supply (See Note 4)
MicroOIT Series	OITware-200 or STEPware-100	7431-0096	Cable Prefix 7442	4010-0005
MacroOIT Series	MAP450D	7431-0048	Cable Prefix 7441	
	MAP460D			
	OIT3600			

Note 1: One configuration software package is required for each customer location. MAPware-100, OITware-200, and STEPware-100 are Windows-based software packages used to configure the MicroOIT and MacroOIT Series Operator Interface Terminals. The MAP450D can be configured locally and may not require configuration software.

Note 2: One configuration cable is required for each customer location. You may configure the MAP450D locally or from a PC running the STEPware-100 program. If you configure the MAP450D locally, you will not need a configuration cable.

Note 3: One communication cable is required for each OIT. To purchase the cable from Maple Systems, see the list of part numbers for our standard 5-ft communication cables in the Support Center on our website at www.maplesystems.com/cables.htm. To build your own cable, see the Cable Assembly Instruction documents, also available in the Support Center on our website.

Note 4: One power supply is required for each OIT. Power cable is not included with product. The MacroOIT series does not require a separate power cable if using a 7441-xxxx-5 communication cable.

*Pricing shown is for single unit quantities. Prices are in US Dollars and EXW Everett, WA.
 This price list supersedes all previous price lists. Specifications and prices are subject to change without notice.*